



- A** Status Indicator
- B** Speaker
- C** Hold
- D** Cancel
- E** Volume
- F** Mute All
- G** Menu
- H** OK
- I** Soft Keys
- J** Navigation Keys
- K** Talk/Off
- L** Display

Phone Overview

- Status indicator indicates the system status.
- Steady Orange for five seconds = Power up
 - Steady Green = Active call
 - Steady Red = When a call is muted, or if there are new messages
 - Green Flashes = Incoming call
 - Steady Orange = Active charging
 - Flashes Orange = Low battery

Cancel


- Press X to cancel an operation
- Press X to exit the menu display
- Press X to return to the idle screen


Talk/Off

- Press to make, answer, or end a call.

Viewing the Main Menu

To use the conference phone menu:

1. When the conference phone is idle, press . The Main Menu appears.

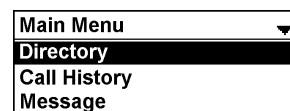

2. Press ▲ or ▼ to highlight the desired sub-menu, and then press ✓. Press ✓ to select a menu item. Press X to cancel an operation or return to the previous screen.